

Remote Monitoring and Tracking for Marine Engine Systems



Operator's Manual

gplink.com

Welcome Aboard

Congratulations on the purchase of your **gplink**[®] system. This operator's manual contains very important information on the operation and maintenance of your system. To get the best results in operation and performance, please take a few minutes to read this manual and familiarize yourself with the system.

Repairs and/or Technical Service

Repairs and adjustments to your system require specialized service procedures and tools available only to qualified service technicians. There are no user serviceable parts or adjustments. The operator of this system should never remove the covers or attempt to service this equipment. If battery replacement is necessary for your sensors, our monitoring staff will send free of charge, including written instructions.

For technical support or repairs please contact:

gplink®

1500 Sensation Weigh Beaufort, NC 28516, U.S.A. Telephone: +1.252.504.5113 Email: concierge@gplink.com



Welcome Aboard2System Description4Component List5gplink Online Tracking6Logging In6Vessel Information6Add/Update Vessel Image6Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8Engine Log8GeoFence History8GeoFence Manager9
System Description4Component List5gplink Online Tracking6Logging In6Vessel Information6Add/Update Vessel Image6Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Component List5gplink Online Tracking6Logging In6Vessel Information6Add/Update Vessel Image6Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8Engine Log8GeoFence History8GeoFence Manager9
gplink Online Tracking6Logging In6Vessel Information6Add/Update Vessel Image6Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Logging In6Vessel Information6Add/Update Vessel Image6Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Vessel Information6Add/Update Vessel Image66Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Add/Update Vessel Image66Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Vessel View7Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Show Position7Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Maps7Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Status Bar8Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Follow Vessel8Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Position Log8Alert History8GeoFence History8Engine Log8GeoFence Manager9
Alert History8GeoFence History8Engine Log8GeoFence Manager9
GeoFence History8Engine Log8GeoFence Manager9
Engine Log 8 GeoFence Manager 9
GeoFence Manager 9
Creating a GeoFence 9
Viewing GeoFences 9
Editing a GeoFence Name 10
Deleting a GeoFence 10
GeoFence Reports 10
Notifications 10
Alert List 10
GeoFence Notifications 11
Assistance List II
Additional Services II
Intrusion Alarms II
System Maintenance 12
Test Cycles 12
Smoke Alarm 12
Bilge Sensor 12
AC Sensor 12
Service & Repair 12
Transferable Limited Warranty 13
Notes 14

System Description

gplink[®] is a satellite-based tracking, monitoring, and notification system for marine engine systems. **gplink** utilizes dual band technology with GSM communications, as well as the Iridium satellite system in order to provide worldwide coverage and ensure that connections are not only reliable, but affordable too.

The **gplink** system has a small, unobtrusive footprint, with no exterior or hard-top mountings required. The transponder unit and small wired antenna is usually mounted under your helm console or engine room.



Safety Notice

The **gplink** system is only an aid to operation of a boat. The performance of the system and the system performance specifications can be affected by many factors including but not limited to equipment failure, environmental conditions, improper installation, handling and/or use. This device should not be used for any navigational or safety purpose. The **gplink** system is used at your sole risk and in no event shall **gplink** be liable for any costs, losses, liabilities, damages, expense or claims of any nature incurred or sustained in respect of this device or its use. You further indemnify and hold harmless **gplink** from any liability or loss resulting from use of the device.

FCC Notice

Your *gplink* system complies with Parts 15 and 80 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. Changes or modifications to this equipment not expressly approved in writing by *gplink* could violate compliance with FCC rules and void the operator's authority to operate this equipment. An FCC Ship's Radio License and Operator's License are not required for use of your *gplink* system.

Component List

Part #	Description	Quantity
MTM (Port) GWD018	Port Monitoring Tracking Module	1
MTM (Starboard) SLV001	Starboard Monitoring Tracking Module	I
HN0771	Port Four-Wire Harness	I
HN0775	Starboard Two-Wire Harness	I
HN0770	Port J19 Three-Wire Harness	I
HN0776	Starboard J19 Three-Wire Harness	I
AN0008	Antenna Square & Wire I (Satellite)	1
AN0007	Antenna Pancake & Wire 2 (GPS & GSM phone)	1
PP10001	RF Receiver	1
PPI0111	RF AC Sensor	I
PPI0211	RF Bilge High Water Sensor	1
PPI0311	RF Smoke Detector	1
	#12 x 3" Stainless Steel Screws	4
	Tie Wraps	2
	Posilock two wire to one connector	2
	4 wire plug connector/RF	1
	4 wire plug connector/power (Red)	I
	Posilock blade fuse holder w/5 amp fuse	I
HN0774	Four-Wire Plug Assembly Interconnector, Primary to Secondary	I
	Tour which has a second meet of a reading to secondary	



Order replacement parts online www.gplink.com/parts



RF Receiver



AC Sensor



Bilge Sensor



Smoke Sensor

gplink Online Tracking

Logging In

Go to http://my.gplink.com and log-in using the e-mail address and password supplied at registration.

For your records, you may wish to note your account email & password here:

Email:	
Password:	

Please see www.gplink.com/resources/videos for instructional tutorials. Once you have successfully logged in to your account gateway, you can fill out some necessary information to make full use of the *gplink* system. Once finished with the set-up instructions in this manual, you will have:

I. Filled out e-mail contacts for alerts in the case of event assistance, low battery conditions and e-mail account with which you may receive your **Monthly Vessel Report**.

2. Become familiar with all of the options available to you within your **gplink** account.

Vessel Information

The Vessel Information page is accessible via the Information button and displays all the basic information about your vessel and gplink account. This data includes name, description, manufacturer, year, VIN number, photo and other registration info, if available.



Most of this data is only editable by the **gplink** Concierge, but you can provide a vessel image in this section if you wish.

Add/Update Vessel Image

- I. Click the Edit Data button
- 2. Click the Choose File button
- 3. Browse to an image of your boat on your local computer and hit Open
- 4. Click Save Changes

Vessel View

The Vessel View page is the default screen you should see after logging in, and can also be found by clicking on the Location tab. This view is designed to give you all of the current vessel information available from your *gplink* system. Next to the Vessel View heading, you will see your vessel's primary information, including name, ID/serial number, make and model, as well as the current date and time.



Show Position

The left column is how you can review your vessel's history on the map. While the **Vessel View** page will automatically show the 25 most recent GPS position reports on the map, you can also define a date range in this column. You may also add **Directional Arrows** to your vessel's map history. After defining a date range, or toggling the directional arrows, click **Refresh View** to apply your changes.

View Waypoints

At any time while viewing the map, you may select which types of waypoints you want to see: Normal Waypoints, Alert Waypoints, or a combination of both.

Maps

This map retains many of the functions of a regular Google Map. There are two different map views for you to choose from; Map & Satellite. The default setting is Map. You may select a different view by using the tabs in the upper right of the map. On each of the maps, you can use the Zoom tool bar to zoom in or out of any map. Or you may click on the map to drag the view to other areas.

Your vessel's current and past location(s) are marked by colored tear drop icons.

Please also note the legend at the bottom of the browser, denoting the colors of waypoints. The majority of the

icon Legend: [CK] [Warning] [Alert] [AWOL]

waypoints of your vessel will be green, but yellow waypoints

include vessel warnings, red waypoints mean your **gplink** has issued a vessel alert, and grey shows a period where your vessel was AWOL. AWOL status occurs when a vessel has not reported at its scheduled intervals. This is a rare occurrence usually caused by the system being off, low battery voltage, blocked communications, or loss of GPS signal.

When you roll your cursor over the different waypoints, you will see the **timestamp**, **latitude** and **longitude**, **speed**, and **heading** of your vessel. Please see the **View Logs** tab to see more complete information from these updates.



Status Bar

The right-hand column shows your vessel's current statistics. You can see your **Main Battery** and **Back-up Battery voltage**, as well as your **smoke alarm**, **high water**, and **AC Power** conditions (if applicable). You will also see the statistics of your engine(s), although note that these are only available when your engines are running. Depending on the configuration of your engine monitoring, these statistics can include, **RPM**, **Oil Pressure**, **Coolant Temp**, **Fuel Rate**, **Engine Load**, **Engine Hours & Check Engine** states.



To see past engine usage, look under the View Logs tab.

Follow Vessel

To quickly see a map of your vessel's current location without any of the custom search features, simply select the **Follow Vessel** tab. This view will continue to update with current information when your vessel is under power.

Position Log

Go to the **View Logs** tab to browse through the data that **gplink** has archived from your vessel's history. Use the date range selectors to see the status, location, speed, heading, and battery voltage of your vessel at all the waypoints taken during a specific time frame. Simply enter the date range and click **Get Report**

IPURK Manager			View Asset Manay				
Fleet Page Information Local Position Log Sport Fi	on Follow V sherman *88	end Poston Lap I	Nessage Log Alet History Centre 100 Filmet	nce History Engine Log CM	tog Settings		
View Reports from 06-01-02	7	a 04/02/2015	(Consecution)	(DESETTING)			
Entertaine (CM1 - 4)	Latitude	Longhole	Ine		Speed (Knobs)	Realing	Mare Failury
06/21/2017 (Twi) 15/29/26	38.872787	.75.75543	In Malion Report		28.7	343	· 25.5 Volt
05/21/2017 (Two) 15:00:26	35 167930	-15.612335	In Mation Report		28.7	209	· 255 Volt
06/21/2017 (Two) 14/53/26	36.073907	-75.466675	in Motion Elegant		27.8	249	• 25.5 Volt
06/21/2017 (Two) 14 30 26	35 227547	15.33423	In Million Report		27.6	245	• 25.5 Vill
05/21/2017 (Two) 14/29/26	35.2709	-75.2034	In Motion Report		27.6	244	· 25.5 Yold
06/21/2017 (Turk) 14 08 34 (837)	36.329323	-75.07446	Al Real Report		27.8	242	• 25.5 Vote
06(21)2017 (Tax) 13 54 33 (SAT)	25 383118	-74.54940	A Rest Report		27	240	· 25.5 Velo
06/21/2017 (Two) 13 38 51 (SAT)	35.435464	-74.867965	At Rest Report		2.6	199	· 25.5 Volt
06(768)-68 12 61 (WF) 110(7580	35.399050	-74.88733	Al Real Report		52	295	• 25.5 Vel
06/27/2017 (Tan) 13:00:42 (SAT)	35.395756	-74.872955	At Red Report		7.8	340	· 25.5 Volt
99/21/2017 (Tel:) 12:53:36 (SAT)	35 395306	-74.672314	Al Rest Report		43	264	• 155 Vol
06210017 (fwe) 12 39 22 (847)	25.405872	-74.06151	At Real Report		43	342	• 25.5 Volt
06/21/2017 (Two 12:23:59 (SAT)	35 393932	-74.86835	At Rest Report		2.6	254	• 255 Yot
06/21/2017 (Two 12/08/42 (SAT)	35 398296	-74.8746	Al Real Report		2.9	21	• 25.5 Volt
06/21/2017 (Two) 11:55:51 (547)	35 30375	-74.09795	At Reat Report		11.3	40	· 255 Vill
952T0017 (Two III 39 58 (SAT)	15,19927	74 17514	Al Deal Bened		43	167	

Alert History

Click the Alert History button to review warning, alert, and AWOL messages sent by your *gplink*. This may include low battery warnings, smoke alarms, or geofence location alerts.

GeoFence History

Click the **GeoFence History** button to view the different **GeoFences** you have set and when you may have entered or exited these custom location fields.

Engine Log

Use the date range selectors to see engine data at all the waypoints taken during a specific time frame. Simply enter the date range and click Get Report

GeoFence Manager

The **gplink GeoFence** feature allows you to create virtual boundaries based on latitude and longitude points, and will allow you view the instances your vessel enters or exits this boundary.



At the very top of the page, select **GeoFence Manager** from the drop-down menu. From here you can add, view, edit, and delete GeoFences for your vessel.

Creating a GeoFence

- I. Click on the Add New button.
- 2. Enter a name for this GeoFence in the left column.

3. Click the dropdown menu under GeoFence Name to choose either containment (sends alerts when your vessel leaves the boundary), or hazard (sends alerts when your vessel enters the boundary).

4. Navigate to the area on the map you want to set up your GeoFence boundary.

5. Right click on the map to place the first boundary point and then left click to create additional points and close the boundary.

6. Click the Save GeoFence button on the left column.

Viewing GeoFences

Your saved GeoFences will be in a list selectable in the top right under View Geofences. Selecting a GeoFence name from the drop-down menu and clicking Go will move the map view to this GeoFence, and also give you the option of editing or deleting it with

the interface in the left hand column.

Editing a GeoFence Name

- I. Follow the previous directions from page 9 on viewing a GeoFence.
- 2. In the top left, enter in the new name and click Click Edit GeoFence Name

Deleting a GeoFence

- I. Follow the previous directions from page 9 on viewing a GeoFence.
- 2. Click the Delete GeoFence button on the left.

GeoFence Reports

Click the Get Report button to download a text file report of your GeoFence history. You may also access this history at any time by clicking View Logs and then GeoFence History.

Notifications

At the very top of the my.gplink.com interface, select **Notifications** from the dropdown menu. This is an important page to configure properly, as it defines who will be contacted in the event of an alert. Users are responsible for keeping this updated by either updating themselves or emailing <u>concierge@gplink.com</u> to provide new info.



Please be sure to enter contacts for these Notifications in order to make your gplink system fully operational.

Alert List

This list defines recipients of alert notifications from your vessel's engine and critical systems monitoring.

Email

Enter the e-mail address of the people you wish to receive an Alert email. Use a ; (semicolon) to separate each address. Please verify your email address(es) are spelled correctly.

SMS Contacts

Enter the SMS number (email address) of the people you wish to receive Alert text messages. Use a ; (semicolon) to separate multiple contacts. The format for the actual email address depends on the phone carrier. Please refer to the current list of common carriers in the Notifications section for guidance. Example number & carrier email addresses are as follows:

AT&T:	1234567890@txt.att.net
Verizon:	1234567890@vtext.com
Virgin Mobile:	1234567890@vmobl.com

GeoFence Notifications

This list defines recipients of GeoFence notifications.

Email

Enter the e-mail address of the people you wish to receive an Alert email. Use a ; (semicolon) to separate each address. Please verify your email address(es) are spelled correctly.

SMS Contacts

Enter the SMS number (email address) of the people you wish to receive Alert text messages. Use a ; (semicolon) to separate multiple contacts. The format for the actual email address depends on the phone carrier. Please refer to the current list of common carriers in the Notifications section for guidance. Example number & carrier email addresses are as follows:

AT&T:	1234567890@txt.att.net
Verizon:	1234567890@vtext.com
Virgin Mobile:	1234567890@vmobl.com

Email

Enter the e-mail address of the people you wish to receive an Alert email. Use a ; (semicolon) to separate each address. Please verify your email address(es) are spelled correctly.

SMS Contacts

Enter the SMS number (email address) of the people you wish to receive Alert text messages. Use a ; (semicolon) to separate multiple contacts. The format for the actual email address depends on the phone carrier. Please refer to the current list of common carriers in the Notifications section for guidance. Example number & carrier email addresses are as follows:

AT&T:	1234567890@txt.att.net
Verizon:	1234567890@vtext.com
Virgin Mobile:	1234567890@vmobl.com

Additional Services

Intrusion Alarms

gplink offers additional vessel intrusion alarms designed specifically for each boat. The vessel intrusion system requires additional hardware installation. Please contact your dealer or the **gplink** Concierge for additional information and pricing for the addition of an intrusion alarm system to your vessel's monitoring system.

System Maintenance

Test Cycles

All vessel RF sensors should be tested a minimum of once every 6 months to ensure normal operation. Batteries should be replaced annually. gplink will provide batteries free of charge upon request.

All components should be visually inspected and tested for proper fault sensing and notification.

Smoke Alarm

To test the gplink smoke sensor, press the test button on the face of the unit for 30 seconds before releasing. An alarm should sound and notification sent when the device is working properly.

Bilge Sensor

Immerse the bilge sensor in water for 2 minutes. An alarm should sound and notification sent when the device is working properly.

AC Sensor

Unplug the AC sensor for 30 minutes. An alarm should sound and notification sent when the device is working properly.

Service & Repair

gplink components are not user-serviceable. Please contact the **gplink** concierge if you feel any of your **gplink** products require service or repair.

Telephone: +1.252.504.5113 Email: concierge@gplink.com



Transferable Limited Warranty

During the first twenty four (24) months from date of original retail purchase of a **gplink** system that fails due to unit defect, the unit will be replaced at no charge to the owner, excluding the labor of uninstalling the failed unit and reinstallation of the replacement unit.

To Submit a Warranty Claim, contact the **gplink** Service Center at 252.504.5113 or <u>warranty@gplink.com</u>. One of our Concierges will review the problem with you in detail. If no solution is found, you will be given an authorization number to return the product, postage paid. Package the part(s) appropriately to prevent damage while in transit. Provide your name, address, daytime telephone number, sales receipt, and a brief description of the problem to:

gplink

1500 Sensation Weigh Beaufort, NC 28516 U.S.A.

Removal, reinstallation expenses, or any damage to the **gplink** system resulting from natural disasters, misuse, neglect, accident, misapplication, improper installation, unauthorized repair or alteration are not covered by this warranty. Products returned to **gplink** that are not covered under this warranty will be repaired or replaced at our service rates or returned to you as-is, at your option. **gplink** expressly disclaims any liability for incidental or consequential damage caused by product defects. Some states do not allow the exclusion or limitation of consequential damages, so the above may not apply to you. The Warranty herein is lieu of any other expressed warranty of merchantibility or fitness or any other obligation on the part of **gplink** or the retailer. All implied warranties are limited to the initial period, as stated above. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you also have other rights, which may vary from state to state.

Notes

gplink is a registered trade mark of gplink LLC. All brand names and trademarks are the property of their respective owners.



Are You Linked to Your Yacht?

gplink is the most capable remote diagnostic tool available for marine engines.





Contact your local dealer or visit **gplink.com** for more information.





gplink.com